



Instructions

Dual purpose Ceramic heater



Low
wattage

047519: Dual purpose
ceramic heater



This is not a toy. Children should not be left unattended with the product. NEVER cover the heater when in use OR cooling down. This is an electric heater and will get hot, you MUST always take care when the product is in use as any surface could become hot.

General and Safety Instructions

- Please keep these instructions, the sales receipt and, if possible, the carton with the inner packaging.
- This product is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by a person that is responsible for their safety.
- By ignoring the safety instructions the manufacturer can not be hold responsible for any damage or injury caused by the product.
- To protect children against the dangers of electrical appliances, please make sure that you never leave the product unattended. Therefore you have to select a storage place for the product where children are not able to grab it and ensure the cable is not hanging in a downward position.
- The product must be placed on a stable, level surface, never mount on a wall.
- Make sure that the product is stored in a dry environment.
- Do not use the heater in a wet environment, such as bathroom or kitchen or touch the plug or operate it with wet hands.
- The user must not leave the product unattended while it is connected to the power supply.
- Make sure the voltage which is indicated on the device matches the local voltage and put the power cable into the socket.
- This product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the product is safe to use based on scientific evidence available today.
- Never move the product by pulling the cord and make sure the cord can not become entangled.
- If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or a similarly qualified person in order to avoid a hazard and invalidate your warranty. Never use the kettle with a damaged cord.
- Do not use outdoors, or on long pile carpets or any purpose other than its intended use.
- This product gets hot during use and takes time to cool down. Do not touch hot surfaces. Use handles or knobs.
- Do not allow moisture or dust to enter the heater.
- Keep the heater away from any flammable object and ensure that it has at least 50 cm clearance around the heater, and 120 cm clearance right before the air outlet.



Quest Dual purpose Ceramic heater

Product Code: 047519
Instruction Version: 4

General and Safety Instructions Continued

- Note: To avoid danger by accidental resetting the thermal protection, this product may not be powered through an external switching device, such as a timer, or connected to a circuit that regularly will be switched on or off.
- Do not use this product in the bathroom or near a sink filled with water. If this product has fallen into the water do not under no circumstances directly grab this product, but first pull the plug from the socket.
- Make sure that the cord does not touch any hot surfaces or is coming directly into contact with the hot parts of the product. Do not place the product underneath or close to curtains, window coverings etc.
- Children shall not play with the product, even when not turned on.
- When in use keep away from other heat sources, plugs, flammable and explosive objects.
- Keep the product and its cord out of reach of children less than 8 years.
- If the heater overheats, turn the heater off, unplug and allow to cool down at least 10 minutes before turning back on.
- During use, any area of the heater may get hot. Be careful when handling the heater at all times.
- NEVER cover the heater with anything when in use as this could cause overheating or fire.
- Always ensure there is no object inside, in front of or obstructing the air inlet or outlet as this can cause damage and failure.

Safety Systems

- The heater has an overheat safety cut out which means , if the heater gets too hot it cuts out automatically. NEVER rely on this cutout switch to turn the heater off when it is not required. Always turn the heater off when not in use.
- The heater also has a tip over cutout switch. If the heater should tip over the cutout switch will automatically switch the heater off.

Care and Maintenance

- Always disconnect the heater before cleaning or maintenance and to allow to cool down before proceeding.
- If the heater gets dirty, the exterior of the heater should be cleaned.
- The air inlet and outlet should be cleaned regularly (at least twice a year under normal use).
- Do not use detergents, abrasive cleaning liquids or chemicals to clean this heater.

Operation

- Once plugged in, turn the thermostat to the position '+', then turn the heat select switch to the '**' position. The heater should now blow cool air.
- Then turn the heat select switch to the 'I' position. The heater will now blow warm air and run at approximately 750W.
- Then turn the heat select switch to the 'II' position. The heater will now blow hot air and run at approximately 1500W.
- Push down the oscillating function button and the heater will turn left and right helping to blow the hot air around the entire space.
- When you are ready to turn the heater off, first switch it to the '*' position and allow it to blow cool air for approximately 3 minutes before turning off.



Warranty Claim

- In the unlikely event of a warranty claim, you must contact your retailer.
- Take the product to your retailer that you purchased it from along with your proof of purchase and explain the issue with the retailer.
- The retailer will then check the product and get in touch with the wholesaler or manufacturer.
- The retailer will keep you informed of the progress of the claim.
- The wholesaler or manufacturer will not (unless under special circumstances) get in touch with you as all information will be passed back directly to the retailer.

Warranty Information

- This product comes with a full 12 month manufacturers defect warranty and covers any manufacturers defects for one (1) year from the date of the original purchase. It does not cover any damage occurred though:
 - The product falling or being dropped.
 - The product has been technically changed by the owner or another third party
 - Improper use of the product and normal wear and tear.
- The affected part will be replaced or repaired (manufacturers option) if they are found to be defective within the one (1) year time frame.
- The warranty will be void if the product has been subject to neglect, misuse, improper installation, misapplication, alteration or accident including, but not limited to, improper installation, maintenance or use of unauthorised parts or attachments.
- Damage caused by not following the instruction manual in full will invalidate the warranty, if this results in consequential damages, Quest will not be liable for these damages or any costs incurred due to these damages.
- Quest will not be liable for material damage or personal injury caused by improper use or if the safety instructions are not properly executed in full.
- All claims must be made through the retailer you purchased the product from and not direct with the wholesaler or manufacturer.
- Warranty claims cannot be honoured without an original dated receipt and or proof of purchase.
- By executing repairs the original warranty period of (1) one year will not be extended, nor the right to a complied new warranty. This warranty is only legal on European soil. This warranty does not overrule the European directive 2011/83/EU.
- This product may not be amended or changed.

Quest Dual purpose ceramic heater

Code: 047519

Specifications

Heat Source: Ceramic Plates

Voltage: 220-240v

Frequency: 50/60 Hz

Wattage: 750/1500W

Size: 16 × 14 × 23 cm*

Weight: 1.47 kg*

The manufacturer reserves the right to change the products characteristics without prior notice.



Correct Disposal

This marking indicates that this product should not be disposed with other household wastes though out the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote sustainable reuse of material resources.

To return your used product, please use the return and collection systems or contact the retailer from where the product was purchased.



* All sizes and weights are approximate