



Instructions

3 Piece non-stick Pan Set



Non
stick

1238B: 3 Piece non-stick
pan set



This is not a toy. Children should not be left unattended with the product when in use. When used this product may get hot, always take care as any surface could become hot. Always use the handle to move the pans.

General and Safety Instructions

- Please keep these instructions, the sales receipt and, if possible, the carton with the inner packaging.
- This product is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by a person that is responsible for their safety.
- By ignoring the safety instructions the manufacturer can not be hold responsible for any damage or injury caused by the product.
- The product must be placed on a stable, level surface.
- Make sure that the product is stored in a dry environment..
- The user must not leave the product unattended when in use.
- This product gets hot during use and takes time to cool down. Do not touch hot surfaces. Use handles or knobs.
- Only cook consumable food.
- It is absolutely necessary to keep this product clean at all times, because it comes into direct contact with food.
- Allow the product to cool down before you clean it or storing it away.
- Children shall not play with the product.
- Ensure that the handle does not project over the edge of the hob.
- Make sure the pan is positioned correctly over the heat source.

Care and Maintenance

- Before first use wash in warm soapy water, then rinse and dry.
- To protect the non stick coating we recommend the use of nylon, plastic or wooden utensils.
- Never use harsh and abrasive cleaners, steel wool or a scouring pad as this may damage the product.

Warranty Claim

- In the unlikely event of a warranty claim, you must contact your retailer.
- Take the product to your retailer that you purchased it from along with your proof of purchase and explain the issue with the retailer.
- The retailer will then check the product and get in touch with the wholesaler or manufacturer.
- The retailer will keep you informed of the progress of the claim.
- The wholesaler or manufacturer will not (unless under special circumstances) get in touch with you as all information will be passed back directly to the retailer.

Warranty Information

- This product comes with a full 12 month manufacturers defect warranty and covers any manufacturers defects for one (1) year from the date of the original purchase. It does not cover any damage occurred though:
 - The product falling or being dropped.
 - The product has been technically changed by the owner or another third party
 - Improper use of the product and normal wear and tear.
 - Scratches or cosmetic damage to the underside of the pans.
- The affected part will be replaced or repaired (manufacturers option) if they are found to be defective within the one (1) year time frame.
- The warranty will be void if the product has been subject to neglect, misuse, improper installation, misapplication, alteration or accident including, but not limited to, improper installation, maintenance or use of unauthorised parts or attachments.
- Damage caused by not following the instruction manual in full will invalidate the warranty, if this results in consequential damages, Quest will not be liable for these damages or any costs incurred due to these damages.
- Quest will not be liable for material damage or personal injury caused by improper use or if the safety instructions are not properly executed in full.
- All claims must be made through the retailer you purchased the product from and not direct with the wholesaler or manufacturer.
- Warranty claims cannot be honoured without an original dated receipt and or proof of purchase.
- By executing repairs the original warranty period of (1) one year will not be extended, nor the right to a complied new warranty. This warranty is only legal on European soil. This warranty does not overrule the European directive 2011/83/EU.
- This product may not be amended or changed.

3 Piece non-stick pan set

Code: 1238B

Specifications

1 × Small Pan with lid : 16.2 × 7.4 × 11 cm. : 0.4 kg

1 × Medium Pan with lid : 18 × 8 × 12 cm. : 0.45 kg.

1 × Large Pan with lid: 20 × 8 × 12 cm. : 0.60 kg.

The manufacturer reserves the right to change the products characteristics without prior notice.



Correct Disposal

This marking indicates that this product should not be disposed with other household wastes though out the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote sustainable reuse of material resources.

To return your used product, please use the return and collection systems or contact the retailer from where the product was purchased.