

# Oil filled 7 Fin Radiator



Low  
wattage

141001: Oil filled 7 fin  
radiator



**This product is not a toy and should never be used by children. Please ensure children are supervised at all times.**

**The exterior of the product can get hot. Avoid any physical contact.**

## General Instructions

- Please keep these instructions, the sales receipt and, if possible, the carton with the inner packaging.
- This product is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by a person that is responsible for their safety.
- By ignoring the safety instructions the manufacturer can not be hold responsible for any damage or injury caused by the product.
- To protect children against the dangers of electrical appliances, please make sure that you never leave the product unattended. Therefore you have to select a storage place for the product where children are not able to grab it and ensure the cable is not hanging in a downward position.
- The product must be placed on a stable, level surface.
- Make sure that the product is stored in a dry environment.
- Do not use the radiator in a wet environment, such as bathroom or touch the plug or operate it with wet hands.
- The user must not leave the product unattended while it is connected to the power supply.
- Make sure the voltage which is indicated on the device matches the local voltage and put the power cable into the socket.
- This product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the product is safe to use based on scientific evidence available today.
- Never move the product by pulling the cord and make sure the cord can not become entangled.
- If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or a similarly qualified person in order to avoid a hazard and invalidate your warranty. Never use the radiator with a damaged cord.
- Do not use outdoors or any purpose other than its intended use.
- Note: To avoid danger by accidental resetting the thermal protection, this product may not be powered through an external switching device, such as a timer, or connected to a circuit that regularly will be switched on or off.

## Safety Instructions

- This product gets hot during use and takes time to cool down. Do not touch hot surfaces. Use handles or knobs.
- Do not allow moisture or dust to enter the radiator.
- Keep the radiator away from any flammable object and ensure that it has at least 15cm clearance from any object.
- Do not use this product in the bathroom or near a sink filled with water. If this product has fallen into the water do not under no circumstances directly grab this product, but first pull the plug from the socket.
- Make sure that the cord does not touch any hot surfaces or is coming directly into contact with the hot parts of the product. Do not place the product underneath or close to curtains, window coverings etc.
- Children shall not play with the product.
- Keep the product and its cord out of reach of children less than 8 years.
- If the radiator overheats, turn the radiator off, unplug and allow to cool down at least 10 minutes before turning back on.
- During use, any area of the radiator may get hot. Be careful when handling the radiator at all times.
- NEVER cover the radiator with anything when in use as this could cause overheating or fire.

## Before First Use (Assembly)


- The base legs must be attached before use.
- The rear leg slides over the last fin.
- The front leg slides into place underneath the front panel.
- These legs are also used for cord storage when the radiator is not in use.

## Operation

- Place the radiator on even ground and plug the radiator in.
- Start turning the thermostat control clockwise.
- You will hear a click and the power indicator light will come on. This indicates that the radiator is now on.
- Turning the thermostat control clockwise will increase the temperature, turning the thermostat anti-clockwise will decrease the temperature.
- When turning the radiator off, turn the thermostat control all the way anti-clockwise until it clicks and the power indicator light turns off.
- This indicates that the radiator is turned off. Unplug the radiator and then allow to cool.

## Care and Maintenance

- The radiator should be cleaned regularly to wipe out the dust on the surface of fins. As this may result the radiating efficient.
- Unplug from the power supply and allow the appliance to cool down.
- Wipe out with a soft damp cloth. Do not use detergent or abrasives.
- Do not scrap the surfaces of fins with sharp hard tools, to avoid surfaces getting rusty, because of damage of the paint coat.

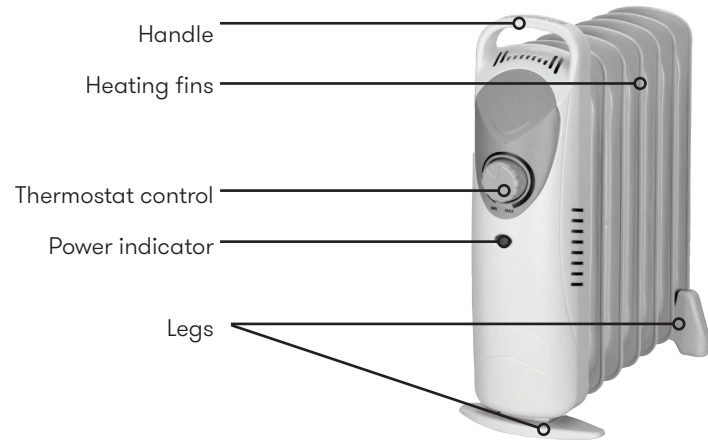

## Warranty Information

- This product comes with a full 12 month manufacturers defect warranty and covers any manufacturers defects for one (1) year from the date of the original purchase. It does not cover any damage occurred though:
  - The product falling or being dropped.
  - The product has been technically changed by the owner or another third party
  - Improper use of the product and normal wear and tear.
  - Screen tears, tent tears or any damage due to high wind conditions or unattended use.
- The affected part will be replaced or repaired (manufacturers option) if they are found to be defective within the one (1) year time frame.
- The warranty will be void if the product has been subject to neglect, misuse, improper installation, misapplication, alteration or accident including, but not limited to, improper installation, maintenance or use of unauthorised parts or attachments.
- Damage caused by not following the instruction manual in full will invalidate the warranty, if this results in consequential damages, Quest will not be liable for these damages or any costs incurred due to these damages.
- Quest will not be liable for material damage or personal injury caused by improper use or if the safety instructions are not properly executed in full.
- All claims must be made though the retailer you purchased the product from and not direct with the wholesaler or manufacturer.
- Warranty claims cannot be honoured without an original dated receipt and or proof of purchase.
- By executing repairs the original warranty period of (1) one year will not be extended, nor the right to a complied new warranty. This warranty is only legal on European soil. This warranty does not overrule the European directive 2011/83/EU.
- This product may not be amended or changed.

## Warranty Claim

- In the unlikely event of a warranty claim, you must contact your retailer.
- If you have not registered your screen house, first fill out the registration form overleaf and take this with you when you go to your retailer.
- Take the screen house to your retailer that you purchased the screen house from along with your proof of purchase and explain the issue with the retailer.
- The retailer will then check the screen house and get in touch with the wholesaler or manufacturer.
- The retailer will keep you informed of the progress of the claim.
- The wholesaler or manufacturer will not (unless under special circumstances) get in touch with you as all information will be passed back directly to the retailer.

## Oil filled 7 fin radiator

Code: 141001

### Specifications

Power Supply: 220 - 240V

Frequency: 50 Hz

Power: 800W

*The manufacturer reserves the right to change the products characteristics without prior notice.*



### Correct Disposal

This marking indicates that this product should not be disposed with other household wastes though out the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote sustainable reuse of material resources.

To return your used product, please use the return and collection systems or contact the retailer from where the product was purchased.

