



Instructions

Table Top Toaster Oven



Low
Wattage

7506: Toaster oven



This is not a toy. Children should not be left unattended with the product. This is an electric oven and will get hot, you MUST always take care when the product is in use as any surface could become hot.

General and Safety Instructions

- Please keep these instructions, the sales receipt and, if possible, the carton with the inner packaging.
- This product is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by a person that is responsible for their safety.
- By ignoring the safety instructions the manufacturer can not be hold responsible for any damage or injury caused by the product.
- To protect children against the dangers of electrical appliances, please make sure that you never leave the product unattended, always store the product where children are not able to grab it and ensure the cable is not hanging in a downward position.
- The product must be placed on a stable, level surface and stored in a dry environment.
- Make sure that the product is stored in a dry and not wet environment, such as bathroom or near a sink with water in.
- Never touch the plug or operate the product with wet hands.
- If this product has fallen into water, do not under any circumstances touch this product, first disconnect the product from the power supply.
- Never leave the product unattended while it is connected to the power supply.
- Never move the product by pulling the cord and make sure the cord can not become entangled.
- If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or a similarly qualified person in order to avoid a hazard and invalidate your warranty. Never use the kettle with a damaged cord.
- Make sure that the cord does not touch any hot surfaces or is coming directly into contact with the hot parts of the product. This product gets hot during use and takes time to cool down. Do not touch hot surfaces.
- Keep the oven away from any flammable object. Do not place the product underneath or close to curtains, window coverings etc.
- The oven should always be placed on a heat-resistant and splash proof surface.
- Whilst this oven has a timer function, you should never rely on the timer to turn the oven off. Never leave the oven unattended when in use.
- Children shall not play with the product, even when not turned on. Keep the product and its cord out of reach of children less than 8 years.

General and Safety Instructions Continued

- Make sure the voltage which is indicated on the device matches the local voltage and put the power cable into the socket.
- This product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the product is safe to use based on scientific evidence available today.
- Note: To avoid danger by accidental resetting the thermal protection, this product may not be powered through an external switching device, such as a timer, or connected to a circuit that regularly will be switched on or off.

Care and Maintenance

- Remove the plug from the outlet and let the device cool down. Wash all parts in warm soapy water. Rinse and dry thoroughly.
- Clean the inside of the device with a mild detergent or dedicated oven cleaner.
- Clean the outside with a damp cloth. Never use harsh and abrasive cleaners, steel wool or a scouring pad as this will damage the device.
- Do not immerse in water or other liquid.
- Never immerse the device in water or other liquid. Do not place the device in the dishwasher to clean. If the inside of the oven is contaminated, boil and bake process can take longer time than normal.

Parts description

1. Glass door
2. Temperature control
3. Power indicator
4. Time control
5. Crumb tray
6. Grid
7. Baking tray
8. Handle



Before first use

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V240V 50/60Hz)
- Before using the device for the first time, wash all loose parts in warm soapy water. Rinse and dry thoroughly below. These parts are also dishwasher safe.
- Always place the unit on a flat stable surface and ensure at least 30 cm. free space around the unit. This device is not suitable for outdoor installation or use. Place the device in a safe place, not too close to a wall where the wall can burn or discolor. Please make sure that curtains or fabrics do not contact the device. Please make sure the surface is heat resistant to avoid and damage.
- Food, which is baked too long in the oven can burn; this can be prevented by checking the food in the oven regularly. Never heat food in jars or cans directly in the oven as they could explode and cause injury.
- Always use ovenproof bowls and plates.
- The oven may at first use have an odd odor, this is normal, so use the device in a well-ventilated area.
- CAUTION: The exterior of the device can get hot. Avoid any physical contact of the external surfaces while in use to avoid injury. Always use the handle on the glass door to open the oven.

General Usage

- Place the grid, the baking tray or both in the oven. These can be placed at different positions depending on the required cooking method or food size.
- Use the temperature control dial to set the desired temperature.
- Use the time setting dial to change the cooking time depending on the food being cooked. The maximum time setting is 60 minutes, the minimum time setting is 2 minutes.
- The red indicator light will illuminate when the device is active. When the device has reached the set time, the indicator light turns off and the device gives an audio signal.
- Always use the provided handle for the grid or the baking tray to remove it from the oven.
- Use the grid to prepare dry foods such as bread and pizza.
- The baking tray is suitable for cooking food which fat is released, such as meat and chicken dishes.

Warranty Claim

- In the unlikely event of a warranty claim, you must contact your retailer.
- Take the product to your retailer that you purchased it from along with your proof of purchase and explain the issue with the retailer.
- The retailer will then check the product and get in touch with the wholesaler or manufacturer.
- The retailer will keep you informed of the progress of the claim.
- The wholesaler or manufacturer will not (unless under special circumstances) get in touch with you as all information will be passed back directly to the retailer.

Warranty Information

- This product comes with a full 12 month manufacturers defect warranty and covers any manufacturers defects for one (1) year from the date of the original purchase. It does not cover any damage occurred though:
 - The product falling or being dropped.
 - The product has been technically changed by the owner or another third party
- Improper use of the product and normal wear and tear.
- The affected part will be replaced or repaired (manufacturers option) if they are found to be defective within the one (1) year time frame.
- The warranty will be void if the product has been subject to neglect, misuse, improper installation, misapplication, alteration or accident including, but not limited to, improper installation, maintenance or use of unauthorised parts or attachments.
- Damage caused by not following the instruction manual in full will invalidate the warranty, if this results in consequential damages, Quest will not be liable for these damages or any costs incurred due to these damages.
- Quest will not be liable for material damage or personal injury caused by improper use or if the safety instructions are not properly executed in full.
- All claims must be made through the retailer you purchased the product from and not direct with the wholesaler or manufacturer.
- Warranty claims cannot be honoured without an original dated receipt and or proof of purchase.
- By executing repairs the original warranty period of (1) one year will not be extended, nor the right to a complied new warranty. This warranty is only legal on European soil. This warranty does not overrule the European directive 2011/83/EU.
- This product may not be amended or changed.
- The affected part will be replaced or repaired (manufacturers option) if they are found to be defective within the one (1) year time frame.

Table top toaster oven

Code: 7506

Specifications

Temperature: 100 - 230°C

Size: 29 × 39 × 23 cm. *

Weight 2.7 kg *

Capacity: 9 L *

Wattage: 800W

Frequency: 50/60 Hz

Voltage: 220-240V.

The manufacturer reserves the right to change the products characteristics without prior notice.

The manufacturer reserves the right to change the products characteristics without prior notice.



Correct Disposal

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

* All sizes and weights are approximate