


QUEST

leisure products

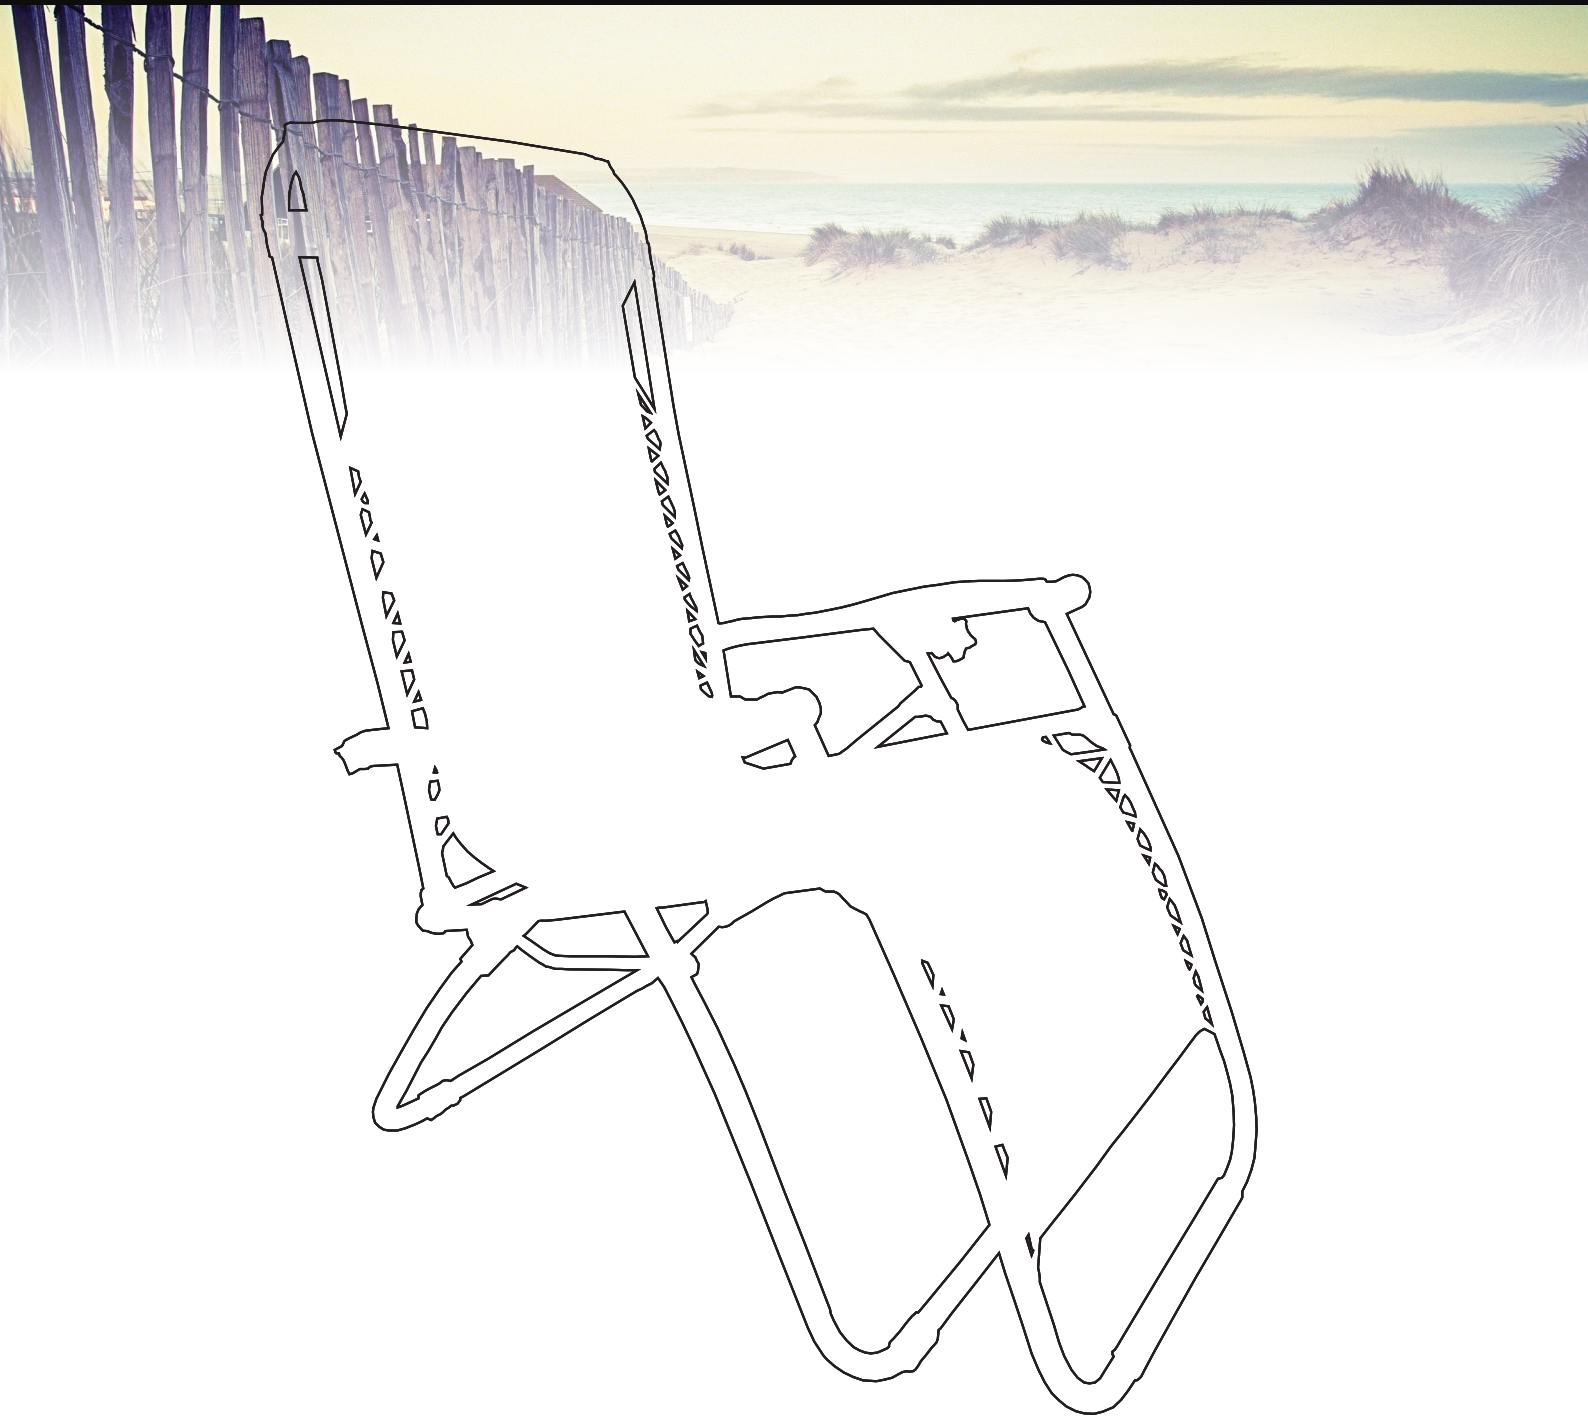

F2027 Hygrove Relax

• Full item instructions and extended details •



Thank you

for purchasing this product. At Quest we take every care to ensure that the product fulfils your expectations. We hope you enjoy using this product

General Use

Failure to follow the general use instructions below could lead to damage to the chair or injury to your person. Always read and follow these instructions when using the product.

- Always ensure that the arms are locked in position before leaning against the back of the chair.
- Always ensure all legs remain in contact with the ground and take extra care when using the chair on uneven ground as this can lead the chair to move about.
- Children should always be under direct adult supervision when using this product and must not be allowed to operate any folding or adjustable mechanisms.
- Keep hands away from folding parts to prevent entrapment. Take care when opening, closing and or adjusting this product.
- Do not force the product at any time, the product will fold away without the need for undue force.
- Do not leave outside in severe weather conditions.
- Please retain all information for further reference



Quest manual download site

The quest manual download site can be found at the url below or the QR code to the left

<http://www.questleisure.com/manuals>.



Storage , Care and Cleaning

Details on how to look after your product.

Storage

To help keep your product looking newer for longer and prolong the life and use of the product, we recommend that the product is covered when not in use.

If the product is not going to be used for an extended period (such as a winter period) we recommend that it is carefully folded away and stored in a clean, dry and free from damp location.

Care and Cleaning Instructions

Never use and harsh or abrasive cleaners or brushes when cleaning this product as the frame and fabric may be damaged when doing so.

Never fold and put the product away when wet as this can trap water in the product, which can lead to mould and mildew build up.

- **Fabric :** We recommend using a dedicated fabric cleaner for the fabric, if one is not available simply warm soapy water. After it has been cleaned, rinse with clean water to make sure there's no soap or cleaner left inside the fabric. Once rinsed allow the product to dry naturally before folding away and storing.
- **Frame :** First allow any dirt to dry and brush with a soft brush to remove loose dirt. Once this is done wipe the frame down with warm soapy water and a soft cloth. Once cleaned allow to dry naturally before storing away.
- **Side Table (If applicable) :** Simply wipe the table down with warm soapy water and a soft cloth. Once cleaned dry with a towel or soft cloth afterwards.

Hang Tag Artwork

Below is a copy of the hang tag that came with your product. This is just for your reference and you should still keep the original that came with your product.





Warranty

Details on the warranty that comes with your product.

Warranty : 12 Months (1 Year) warranty.

Warranty Claim

- In the unlikely event of a warranty claim, you must contact your retailer.
- If you have not registered your product, first fill out the registration form overleaf and take this with you when you go to your retailer.
- Take the product to your retailer that you purchased it from along with your proof of purchase and explain the issue with the retailer.
- The retailer will then check the product and get in touch with the wholesaler or manufacturer.
- The retailer will keep you informed of the progress of the claim.
- The wholesaler or manufacturer will not (unless under special circumstances) get in touch with you as all information will be passed back directly to the retailer.

Warranty Information

- This product comes with a full 12 month manufacturers defect warranty and covers any manufacturers defects for one (1) year from the date of the original purchase. It does not cover any damage occurred though:
 - The product falling, being dropped, scratched or damaged in any way.
 - The product has been technically changed by the owner or another third party
 - Improper use of the product.
 - Normal wear and tear - which includes (but is not limited to): colour fading, wearing, stretching.
 - Weather damage - which includes (but is not limited to) U.V. degradation and colour changing.
- The affected part will be replaced or repaired (manufacturers option) if they are found to be defective within the one (1) year time frame.
- The warranty will be void if the product has been subject to neglect, misuse, improper installation, misapplication, alteration or accident including, but not limited to, improper installation, maintenance or use of unauthorised parts or attachments.
- Damage caused by not following the instruction manual in full will invalidate the warranty, if this results in consequential damages, Quest will not be liable for these damages or any costs incurred due to these damages.
- Quest will not be liable for material damage or personal injury caused by improper use or if the safety instructions are not properly executed in full.
- All claims must be made through the retailer you purchased the product from and not direct with the wholesaler or manufacturer.
- Warranty claims cannot be honoured without an original dated receipt and or proof of purchase.
- By executing repairs the original warranty period of one (1) year will not be extended, nor the right to a complied new warranty. This warranty is only legal on European soil.
- This warranty does not overrule the European directive 2011/83/EU.
- This product may not be amended or changed.



Folding and Unfolding

Details on how to use your product.

Folding and Unfolding

- Take the chair from the bag and stand the chair upright as shown in image 1. Ensure that the arms are unlocked (as shown in image 4).
- Standing at the side of the chair with one hand on the back rest and one hand on the arm rest (as shown in image 2) push these apart by pushing in opposite directions. If the chair does not want to open as shown, then the arms of the chair may be pushed too far back and inhibiting the chair from opening. If this is the case, release the arms by moving them forward and then try opening the chair again.
- Continue pushing (as shown in image 3) until the legs are fully apart (as shown in image 5).
- When the chair is open with the legs fully apart (image 5) you can pull the back rest up into the upright position and lock the arms into position (as shown in the image 5).
- To adjust the recline, set the locks to unlocked (as shown in the image 4), sit in the chair, place your legs on the bottom bar of the chair and push back also using your legs to pull up and the back will recline (as shown in image 5).
- When folding the chair make sure there is nothing obstructing the chair first, then unlock the chair (as shown in image 4), pull arm on the arms rest and pull the back of the chair forward until the chair is closed, you might then need to fully close the chair by pushing the frame together. Once done lock the legs (as shown in image 4).

Folding and Unfolding

Details on how to use your product.



image 1



image 2



image 3

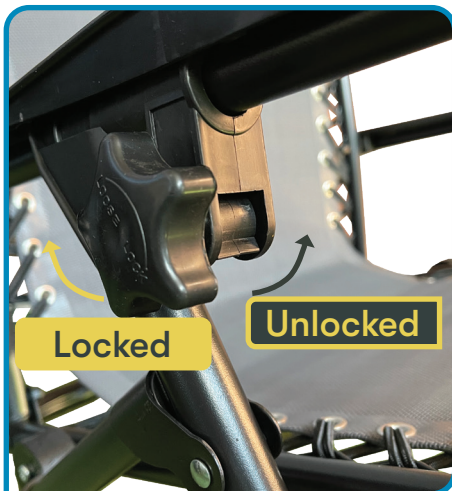


image 4



image 5



Accessories

A few little extras to add to your product.



Cat No 124900

Quest Elite® furniture bag

- New improved colour and more durable material
- Premium quality
- Complete with its own carry bag
- Can fit multiple chairs in one bag • Universal use
- Fabric: 600D Fabric • Size: 67 x 18 x 113 cm
- Weight: 1.1 kg

Cat No 118914DP

Clamp on sun shade

- Adjustable position • U.V. protection
- Universal use • Anti glare • Can be used on chairs, tables, prams, push chairs and more
- Canopy radius: 68.5 cm • Height: 105 cm
- Folded size: 7 x 7 x 94 cm
- Weight: 0.3 kg.





Accessories

A few little extras to add to your product.



Cat No 124901

Quest Elite spare elastics

- Elasticated cord • Metal end caps
- Fits all relax and comfort chairs
- QTY: 4 cords (2 different lengths)
- Length: 36 inches and 72 inches

Cat No F2063

Atlas Carry Cart

The perfect carry cart. Folds away when not in use. Strong enough to carry two small children, or camping accessories, furniture, plants and more.





Accessories

A few little extras to add to your product.

Cat No F2024HC

Quest head cushion or lumbar support

- Universal fit • Universal use • High quality
- Fits any chair between 45 and 60 cm width
- Size: 38 x 17 x 5cm. • Weight: 0.22 kg.



Cat No F2024DT

Quest drinks tray

- Universal fit • Universal use • High quality
- Perfect addition to Hampton relax and recline
- Size: 31 x 17 x 4 cm. • Weight: 0.21 kg



Blank Page

Page left blank to allow you to write your own notes.

Welcome

to the great outdoors

www.questleisure.com



twitter.com/questleisure



facebook.com/questleisure



youtube.com/questleisure