



Welcome
to your instructions

K0030/31 : 1.7L Scotsman cordless kettle

K0030/31 : 1.7L Scotsman cordless kettle full instructions

Thank you for purchasing this product. At Quest we take every care to ensure that the product fulfils your expectations. We hope you enjoy using this product.



General Use

This product is not a toy and should never be used by children. Please ensure children are supervised at all times. Never leave the kettle to boil unattended as it could boil dry, which could lead to damage or fire.

- Please keep these instructions, the sales receipt and, if possible, the carton with the inner packaging.
- Please read the instruction manual carefully before using the device.
- Take the product out the box. Remove the stickers, protective foil or plastic from the device.
- This product is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by a person that is responsible for their safety.
- By ignoring the safety instructions the manufacturer can not be hold responsible for any damage or injury caused by the product.

Quest manual download site

The quest manual download site can be found at the url or the QR code below



<http://www.questleisure.com/manuals>.

K0030/31 : 1.7L Scotsman cordless kettle full instructions

General Use..... continued

- To protect children against the dangers of electrical appliances, please make sure that you never leave the product unattended. Therefore you have to select a storage place for the product where children are not able to grab it and ensure the cable is not hanging in a downward position.
- The product must be placed on a stable, level surface.
- Do not touch hot surfaces. Use the handle at all times.
- The user must not leave the product unattended while it is connected to the power supply.
- Keeping this kettle clean and de-scaled will increase its life span and avoid unnecessary wear.
- Make sure that the product is stored in a dry environment.
- Check if the voltage of the product corresponds to the main voltage of your supply.
- This product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the product is safe to use based on scientific evidence available today.
- Never move the product by pulling the cord and make sure the cord can not become entangled and do not wind it around the product.
- Allow the product to cool down before you clean or store it.
- To protect yourself against an electric shock, do not immerse the cord plug or product in the water or any other liquid.
- Do not use this product with a damaged cord or plug or when the product has malfunctions, or has been damaged in any manner.
- Do not use outdoors or any purpose other than its intended use.
- The kettle can only be used with the stand provided.
- All repairs including to the plug or cord should be made by a competent qualified repair service. Do not repair this product yourself.
- Note: To avoid danger by accidental resetting the thermal protection, this product may not be powered through an external switching device, such as a timer, or connected to a circuit that regularly will be switched on or off.
- Allow the device to cool down before you are going to remove or replace spare parts.
- Do not use this product near direct heat sources.
- Make sure the cord does not touch the hot parts of the product.
- Do not use this product in the bathroom or near a sink filled with water. If this product has fallen into the water do not under no circumstances directly grab this product, but first pull the plug from the socket.
- Make sure that the cord is not hanging over the edge of the table or counter, does not touch any hot surfaces or is coming directly into contact with the hot parts of the product. Do not place the product underneath or close to curtains, window coverings etc.
- Children shall not play with the product.
- Cleaning and user maintenance shall not be made by children unless they are supervised.
- Keep the product and its cord out of reach of children.

K0030/31 : 1.7L Scotsman cordless kettle full instructions

General Use

- Remove the lid by using the knob on the top. You close the lid simply by putting the lid back in place and pushing down on the knob until it closes.
- Fill the kettle with the required amount of water. IMPORTANT: It must be below and maximum indicated levels.
- Place the kettle on the stand and connect the stand to the power supply. Position the kettle so the spout is facing away from you.
- Press the power switch down. Once pressed down the switch will light up indicating that the kettle is on.
- Do not remove the lid while the kettle is boiling.
- Do not tip kettle upside down when pouring.
- Allow the kettle to cool thoroughly before re-filling. Never re-fill a hot kettle with cold water.

Cleaning and Maintenance

- Unplug the base before cleaning.
- Allow the kettle to cool down before cleaning.
- Do not immerse the power cord, base or kettle in water. Simply wipe the kettle down with warm soapy water. To protect the outer surface do not use abrasive cleaners to wipe the kettle. Once cleaned rinse the inside of the kettle with cold water to remove any soap which could leave an unwanted aftertaste.
- The kettle will need periodical de-scaling. The interval of this de-scaling will depend on the hardness of water used.
- Do not attempt to maintain this product by yourself. Only a qualified competent person should maintain the product. For any malfunction please contact the retailer you purchased it from.
- Do not leave water in the kettle when not in use to avoid mineral build up.
- Do not use scouring pads or abrasive cleaners as they may damage the surface of the kettle and impact performance.

K0030/31 : 1.7L Scotsman cordless kettle full instructions

Warranty : 12 Months (1 Year) warranty.

Warranty Claim

- In the unlikely event of a warranty claim, you must contact your retailer.
- If you have not registered your product, first fill out the registration form overleaf and take this with you when you go to your retailer.
- Take the product to your retailer that you purchased it from along with your proof of purchase and explain the issue with the retailer.
- The retailer will then check the product and get in touch with the wholesaler or manufacturer.
- The retailer will keep you informed of the progress of the claim.
- The wholesaler or manufacturer will not (unless under special circumstances) get in touch with you as all information will be passed back directly to the retailer.

Warranty Information

- This product comes with a full 12 month manufacturers defect warranty and covers any manufacturers defects for one (1) year from the date of the original purchase. It does not cover any damage occurred though:
 - The product falling, being dropped, scratched or damaged in any way.
 - The product has been technically changed by the owner or another third party
 - Improper use of the product.
 - Normal wear and tear - which includes (but is not limited to): colour fading and wearing.
- The affected part will be replaced or repaired (manufacturers option) if they are found to be defective within the one (1) year time frame.
- The warranty will be void if the product has been subject to neglect, misuse, improper installation, misapplication, alteration or accident including, but not limited to, improper installation, maintenance or use of unauthorised parts or attachments.
- Damage caused by not following the instruction manual in full will invalidate the warranty, if this results in consequential damages, Quest will not be liable for these damages or any costs incurred due to these damages.
- Quest will not be liable for material damage or personal injury caused by improper use or if the safety instructions are not properly executed in full.
- All claims must be made through the retailer you purchased the product from and not direct with the wholesaler or manufacturer.
- Warranty claims cannot be honoured without an original dated receipt and or proof of purchase.
- By executing repairs the original warranty period of one (1) year will not be extended, nor the right to a complied new warranty. This warranty is only legal on European soil.
- This warranty does not overrule the European directive 2011/83/EU.
- This product may not be amended or changed.

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots and toasters. This range includes the following items that are matched with your product.*



Whistling camping style kettle

- High quality • Easy pour • Easy clean high gloss finish • Lightweight • Aluminium base • Whistle function
- Size: 16 x 16x 14 cm. • Weight: 0.21 kg. • Capacity: 1L.
- Size: 18 x 18 x 17 cm. • Weight: 0.26 kg. • Capacity: 2L.
- **Cat No K0054** : 1L
- **Cat No K0055** : 2L

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots and toasters. This range includes the following items that are matched with your product.*



Cat No K0056

2L Folding handle whistling kettle

- Stainless steel construction • Easy pour spout • For use on any hob • Folding handle
- Size: 20.5 x 22 cm. • Volume: 2 L • Weight: 0.4 kg.

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Stainless
Steel
body



Cat No 1153

- Metal construction • Easy pour spout • For use on any hob
- Size: 20 x 20 x 20 cm. • Capacity: 2L • Weight: 0.38 kg.

2L whistling kettle

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*



2.2L Whistling kettle

- Whistle spout • All metal construction • Cool touch handle • For use on any hob • Lightweight
- Size: 19 x 19 x 20 cm • Weight: 0.4 kg.

• **Cat No 1143B:** Black

• **Cat No 1143C:** Cream

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Stainless
Steel



Cat No 1177

Stainless steel teapot

- High quality • More flavour • Tea bags or loose leaf tea • Removable tea filter • Lightweight • Easy to clean
- Durable • Stain resistant • Glass and stainless steel body
- Capacity: 900ml. • Size: 14 x 15 x 11 cm. • Weight: 280g.

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0025

12v Mallard Electric Kettle

- Runs direct from your 12v • Cordless • Water level indicator
- Covered heater coil • Perfect for coffee, tea, instant noodles or to heat baby food • Cord length: 140 cm
- Size: 19 x 19 x 14 cm. • Weight: 0.55 kg. • Volume: 1L.
- Voltage: 12 V • Wattage: 150 W • Hertz: 50/60 Hz

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0026

Collapsible electric kettle with folding handle

- Low wattage • Collapses when not in use • Handle folds away for even smaller pack size • Power indicator
- Size: 18.5 x 13.5 x 18 cm. • Collapsed: 18.5 x 13.5 x 18 cm.
- Capacity: 0.6 L. • Weight: 0.54 kg. • Voltage: 220 – 240v • Wattage: 750w • 50/60Hz

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0057

Glass light up kettle

- High quality • Lights up when in use • Low wattage • Power indicator • Fill gauge
- Size: 20.5 x 24 x 17.5cm. • Weight: 0.94 kg. • Volume: 1 L

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*



Cat No K0034S

1L Rocket stainless steel cordless kettle

- Premium quality • • Cordless • Over heat protection • Boil dry protection • Power light • Level indicator
- Premium high gloss finish • High quality stainless steel body • Low wattage
- Size: 21 x 13 x 21 cm. • Weight: 0.86 kg. • Volume: 1L
- Voltage: 220 - 240 V • Wattage: 1000 W • Hertz: 50/60 Hz

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0034C

1L Rocket stainless steel cordless kettle

- Premium quality • • Cordless • Over heat protection • Boil dry protection • Power light • Level indicator
- Premium high gloss finish • High quality stainless steel body • Low wattage
- Size: 21 x 13 x 21 cm. • Weight: 0.86 kg. • Volume: 1L
- Voltage: 220 - 240 V • Wattage: 1000 W • Hertz: 50/60 Hz

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*



1.8L Rocket stainless steel cordless kettle

- Premium quality • Boil dry & Over heat protection • Cordless • Size: 26 x 15 x 22 cm. • Capacity: 1.8L.
- Weight: 0.98 kg • Voltage 230V • Freq: 50/60 Hz • Wattage: 1000W

• **Cat No K0035S:** Stainless kettle

• **Cat No K0035C:** Cream kettle

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



1.7L Scotsman cordless kettle

- High quality • Water level indicator • Easy clean • Size: 25 x 12 x 24 cm. • Weight: 0.7 kg.
- Voltage 230V • Freq: 50/60 Hz • Wattage: 1000W

• **Cat No K0030:** Black

• **Cat No K0031:** White

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*



Low
Wattage

1L Low wattage Scotsman cordless kettle

- Cordless • Over heat protection • Boil dry protection • Power light • Level indicator • Lightweight
- High quality plastic body • Low wattage • Size: 10 x 18 x 21 cm. • Weight: 0.54 kg. • Volume: 1L
- Voltage: 220 - 240 V • Wattage: 1000 W • Hertz: 50/60 Hz
- **Cat No K0032:** Black

• **Cat No K0033:** White

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



2 Slice Scotsman toaster

- High quality • Low wattage • Easy clean • Crumb tray
- Size: 25 x 14 x 17 cm • Slots: 2 • Weight: 0.86 kg • Voltage 240V • Wattage: 700W • Hertz: 50/60Hz

• **Cat No K0036B:** Black

• **Cat No K0036W:** White

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0038S

2 Slice Rocket stainless steel toaster

- Browning control • Low wattage • Easy clean • Stainless steel • Crumb tray • Premium high gloss finish
- Size: 25 x 20 x 16 cm. • Slots: 2 • Weight: 1.4 kg.
- Voltage : 230V • Hertz: 50/60 Hz • Wattage: 750W

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No 2068

2 Slice Pullman stainless steel toaster

- Temperature control • Low wattage • 2 Toasting slots • Easy to clean • Removable base
- Size: 22 x 16 x 12 cm. • Slots: 2 • Weight: 0.79 kg
- Voltage: 230V • Hertz: 50/60 Hz • Wattage: 750W

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0051

Low wattage Deluxe Maxi Frypan

- Non-stick • Cast Aluminium • Temperature control • Operating light • Removable cable for easy cleaning
- Cord length: 90 cm. • Pan Size: 30.5 x 30.5 cm • Size : 31 x 42 x 14 cm. • Weight: 1.9 kg.
- Voltage: 230 V • Wattage: 1200 W • Hertz: 50/60 Hz

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0012

Large healthy griddle

- Flat cooking area • Griddle cooking area • Total size: 55 x 23.5 x 9.5 cm. • Weight: 1.7 kg.
- Cooking size: 24.5 (flat) + 12.5 (griddle) x 21 cm
- Voltage: 220 – 240v • Wattage: 1400 w • 50/60Hz

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No 7506

- Low wattage • Compact size • Versatile • Adjustable timer
- Size: 36.5 x 24 x 21.5 cm. • (Internal) 24 x 9.5 x 18.5 cm. • Weight 3 kg • Capacity: 9 L
- Wattage: 800W • Hertz: 50/60 Hz • Voltage: 220-240V.

Table top toaster oven

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0015

Low wattage double hot plate

- Easy clean • Low wattage • Portable • Cord length: 100 cm.
- Hotplate size: 15.5cm. • Total Size: 43 x 23.5 x 7 cm. • Weight: 2.5 kg.
- Voltage 220 - 240V • Hertz:: 50/60 Hz • Wattage: 2 x 1000W (two hotplates)

K0030/31 : 1.7L Scotsman cordless kettle full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No 047513

Low wattage single hot plate

- Easy clean • Low wattage • Portable • Hotplate: 15.5cm. • Size: 22 x 22 x 7.5 cm.
- Cord length: 100 cm. • Weight: 1.4kg.
- Wattage: 1000W • Hertz: 50/60 Hz • Voltage: 220 - 240V



...outdoor leisure, home & garden



www.twitter.com/questleisure



www.facebook.com/questleisure



www.youtube.com/questleisure

Email: info@questleisure.com • **Web:** www.questleisure.com