

Screen House Side wall blinds



120052: Screen House 6
side wall blinds (1 pair)

120054: Screen House 4
side wall blinds (1 pair)

120052XL: Screen House 6XL
side wall blinds (1 pair)

120053DSW: Screen House
4+4 side wall blinds (1 pair)

120054DP: Screen House 4
door panel blind

120054TP: Screen House 4
triple side wall blind



This is not a toy. Children should not be left unattended with the product. Injury or death may result from fire if the fabric is exposed to open flame. Always keep flame and heat sources away from the fabric.

Attaching the optional side wall blinds (purchased separately) to the Screen House

- Remove the sidewall(s) from the packaging.
- If the storm strap is attached and pegged on the screen house, remove the storm strap before attaching the sidewall by un-clipping it.
- Unfold the sidewall. Attach the hook found in each corner of the sidewall to the D ring located on the screen house at each corner of the side.
- NOTE: The panels are not square so ensure that the sewn line runs horizontally along the bottom when attaching the sidewall to the screen house.
- When the sidewall is attached to the side carefully pull the pull loop on the screen house through the centre hole in the sidewall. Once done you can re-attach the storm strap to the pull loop.
- Once the above is down ensure that the velcro tabs are attached all the way around the sidewall. The sidewall should go underneath the roof flap (the roof flap is only present on a screen house 2016 onwards) to ensure the best possible water run off.
- Repeat for each sidewall you wish to attach.

Removing optional side wall blinds (purchased separately) from the Screen House

- If the storm strap is attached and pegged on the screen house, remove the storm strap before attaching the sidewall by un-clipping it.
- Detach the velcro straps from around the side of the sidewall.
- Un-clip the clip from the D ring located at each corner of the sidewall.
- Remove the sidewall from the screen house and fold and pack away.