

# QUEST

leisure products



**208414** Aruba quartz heater

• Full item instructions and extended details •



## Thank you

for purchasing this product. At Quest we take every care to ensure that the product fulfils your expectations. We hope you enjoy using this product

### General Use



**This is not a toy. Children should not be left unattended with the product. Injury or death may result from fire if the fabric is exposed to open flame. This is an electric heater and will get hot, you MUST always take care when the product is in use as any surface could become hot.**

- This product gets hot during use and takes time to cool down. Do not touch hot surfaces. Use handles or knobs.
- Do not allow moisture or dust to enter the heater.
- Keep the heater away from any flammable object and ensure that it has at least 15cm clearance from any object.
- Do not use this product in the bathroom or near a sink filled with water. If this product has fallen into the water do not under no circumstances directly grab this product, but first pull the plug from the socket.
- Make sure that the cord does not touch any hot surfaces or is coming directly into contact with the hot parts of the product. Do not place the product underneath or close to curtains, window coverings etc.
- Children shall not play with the product.
- Keep the product and its cord out of reach of children less than 8 years.
- If the heater overheats, turn the heater off, unplug and allow to cool down at least 10 minutes before turning back on.
- During use, any area of the heater may get hot. Be careful when handling the heater at all times.
- NEVER cover the heater with anything when in use as this could cause overheating or fire.



### Quest manual download site

The quest manual download site can be found at the url below or the QR code to the left

<http://www.questleisure.com/manuals>.





# General Use

General usage and details about your product

## General Use.....continued

- Please keep these instructions, the sales receipt and, if possible, the carton with the inner packaging.
- This product is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by a person that is responsible for their safety.
- By ignoring the safety instructions the manufacturer can not be hold responsible for any damage or injury caused by the product.
- To protect children against the dangers of electrical appliances, please make sure that you never leave the product unattended. Therefore you have to select a storage place for the product where children are not able to grab it and ensure the cable is not hanging in a downward position.
- The product must be placed on a stable, level surface.
- Make sure that the product is stored in a dry environment.
- Do not use the heater in a wet environment, such as bathroom or kitchen or touch the plug or operate it with wet hands.
- The user must not leave the product unattended while it is connected to the power supply.
- Make sure the voltage which is indicated on the device matches the local voltage and put the power cable into the socket.
- This product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the product is safe to use based on scientific evidence available today.
- Never move the product by pulling the cord and make sure the cord can not become entangled.
- If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or a similarly qualified person in order to avoid a hazard and invalidate your warranty. Never use the heater with a damaged cord.
- Do not use outdoors or any purpose other than its intended use.
- Note: To avoid danger by accidental resetting the thermal protection, this product may not be powered through an external switching device, such as a timer, or connected to a circuit that regularly will be switched on or off.



# Usage , Care and Cleaning

Details on use and look after your product.

## Safety Cut Out

The heater has an anti-tilt safety cut out which means , if the heater tilts or falls over it cuts out automatically, but this should ever be relied upon and the heater should never be left un-attended when in use .

## Care and Cleaning Instructions

If the heater gets dirty, the exterior of the heater should be cleaned.

Before cleaning the heater, turn off, unplug and allow to cool before using a damp cloth to wipe the heater down.

Do not use detergents, abrasive cleaning liquids or chemicals to clean this heater.

## Usage

Use the control dial on the front of the heater to control the level of heat by turning the heater elemnts on or off:

- To turn the heater on, move the heat selection switch clockwise to the required setting.
- To turn the heater off, move the heat selection switch anti-clockwise to the off setting.
- The different settings are listed below:

Setting	Description
<b>0</b>	Off
<b>400</b>	Heat Setting 1 (400W)
<b>800</b>	Heat Setting 2 (800W)





# Warranty

Details on the warranty that comes with your product.

**Warranty :** 12 Months (1 Year) warranty.

## Warranty Claim

- In the unlikely event of a warranty claim, you must contact your retailer.
- If you have not registered your product, first fill out the registration form overleaf and take this with you when you go to your retailer.
- Take the product to your retailer that you purchased it from along with your proof of purchase and explain the issue with the retailer.
- The retailer will then check the product and get in touch with the wholesaler or manufacturer.
- The retailer will keep you informed of the progress of the claim.
- The wholesaler or manufacturer will not (unless under special circumstances) get in touch with you as all information will be passed back directly to the retailer.

## Warranty Information

- This product comes with a full 12 month manufacturers defect warranty and covers any manufacturers defects for one (1) year from the date of the original purchase. It does not cover any damage occurred though:
  - The product falling, being dropped, scratched or damaged in any way.
  - The product has been technically changed by the owner or another third party
  - Improper use of the product.
  - Normal wear and tear - which includes (but is not limited to): colour fading, wearing, stretching.
  - Weather damage - which includes (but is not limited to) U.V. degradation and colour changing.
- The affected part will be replaced or repaired (manufacturers option) if they are found to be defective within the one (1) year time frame.
- The warranty will be void if the product has been subject to neglect, misuse, improper installation, misapplication, alteration or accident including, but not limited to, improper installation, maintenance or use of unauthorised parts or attachments.
- Damage caused by not following the instruction manual in full will invalidate the warranty, if this results in consequential damages, Quest will not be liable for these damages or any costs incurred due to these damages.
- Quest will not be liable for material damage or personal injury caused by improper use or if the safety instructions are not properly executed in full.
- All claims must be made through the retailer you purchased the product from and not direct with the wholesaler or manufacturer.
- Warranty claims cannot be honoured without an original dated receipt and or proof of purchase.
- By executing repairs the original warranty period of one (1) year will not be extended, nor the right to a complied new warranty. This warranty is only legal on European soil.
- This warranty does not overrule the European directive 2011/83/EU.
- This product may not be amended or changed.

low  
wattage



Cat No E0020

## Bahama dual purpose oscillating fan heater

- Wide oscillation • Low wattage • Quiet fan
- Heats in the winter • Fan in the summer • Anti-tip cut off
- Size: 28 x 22 x 14 cm. • Weight: 1.1 kg. • Voltage 220-2400V • Freq: 50/60 Hz • Wattage: 1000 - 2000W



low  
wattage



Cat No 047519

## Bali oscillating ceramic heater

- Heats in the winter • Fan in the summer • Adjustable • Instant heat • Oscillating • Anti-tip cut off
- Overheat cut off • Size: 16 x 14 x 23 cm. • Weight: 1.47 kg.
- Voltage: 230v • Freq: 50/60 Hz • Wattage: 750 - 1500W





low  
wattage

Cat No E0091

**Banta ceramic heater**

- Oscillating function • Overheat protection • Tip over switch • Premium PTC heating element
- Adjustable heat • Size: 35 x 15 x 17.5 cm. • Weight: 1 kg.
- Voltage: 230 V • Wattage: 450/900 W • Hertz: 50/60 Hz



low  
wattage



Cat No E0092

**Barbuda ceramic heater**

- Small and lightweight • Over heat protection • Tip over switch • Premium PTC heating element
- Size: 12 x 12 x 19 cm. • Weight: 0.5 kg. • Voltage: 230 V • Wattage: 600 W • Hertz: 50/60 Hz



low  
wattage



Cat No 208414

Aruba slimline quartz heater

- Slim line • Portable • Lightweight • Adjustable • Instant heat
- Anti-tip cut off • Cool touch body • Carry handle
- Size: 40 x 30 x 10 cm • Weight: 0.96 kg
- Voltage: 230v. • Freq: 50/60hz • Wattage: 400 - 800w



low  
wattage



Cat No 141001

Maui oil filled radiator

- Low wattage • 7 Fins • Adjustable • Overheat protection • Cord storage • Carry handle • Stability feet
- Pressure tested for Additional Safety • Cable: 140cm
- Weight: 4.15kg • Size: 33 x 39 x 10cm • Wattage: 800w • Voltage: 220-240v • Freq: 50/60hz.

# Welcome

*to the great outdoors*

[www.questleisure.com](http://www.questleisure.com)



[twitter.com/questleisure](https://twitter.com/questleisure)



[facebook.com/questleisure](https://facebook.com/questleisure)



[youtube.com/questleisure](https://youtube.com/questleisure)