



Welcome
to your instructions

F2072 : Lakeland Grassmere swivel back

F2072 : Lakeland Grassmere swivel back full instructions

Thank you for purchasing this product. At Quest we take every care to ensure that the product fulfils your expectations. We hope you enjoy using this product.

General Use

Failure to follow the general use instructions below could lead to damage to the chair or injury to your person. Always read and follow these instructions when using the product.

- Always ensure that the arms are fully in position before leaning against the back of the chair.
- Always ensure all legs remain in contact with the ground and take extra care when using the chair on uneven ground as this can lead the chair to move about.
- Children should always be under direct adult supervision when using this product and must not be allowed to operate any folding or adjustable mechanisms.
- Keep hands away from folding parts to prevent entrapment. Take care when opening, closing and or adjusting this product.
- Do not force the product at any time, the product will fold away without the need for undue force.
- Do not leave outside in severe weather conditions.
- Please retain all information for further reference

Quest manual download site


The quest manual download site can be found at the url or the QR code below



<http://www.questleisure.com/manuals>.

F2072 : Lakeland Grassmere swivel back full instructions

Hang Tag Artwork : Below is a copy of the hang tag that came with your product. This is just for your reference and you should still keep the original that came with your product.

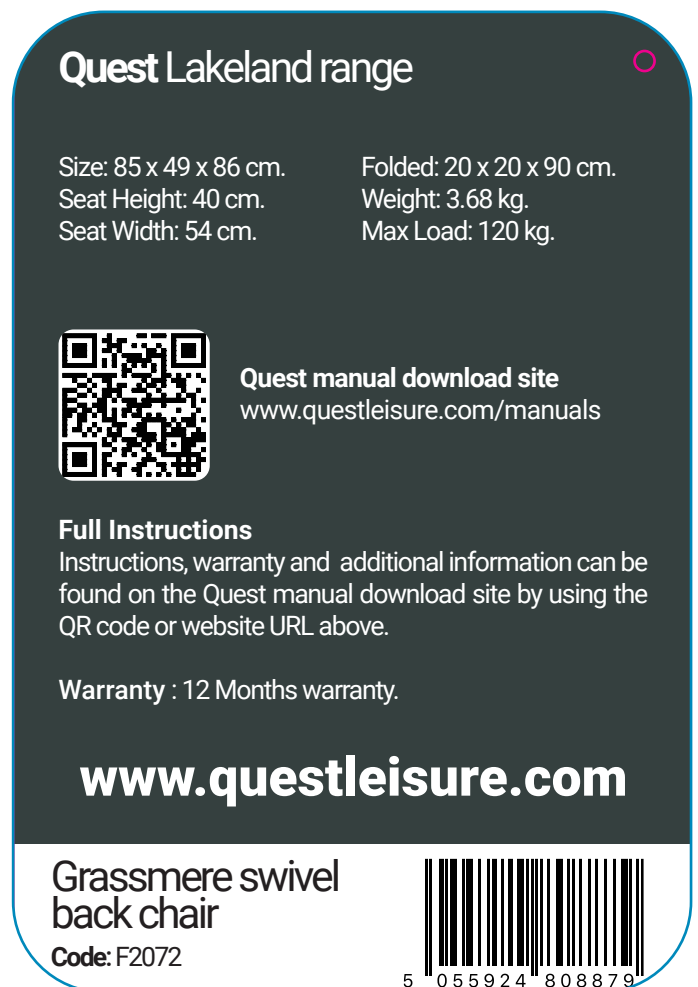

F2072 : Lakeland Grassmere swivel back full instructions

Unfolding the chair

- The chair will have been folded/pushed together and the back rest may have been taken off (to make a smaller pack size) when it was last put away. To unfold the chair ready for use:
 - Take the chair out of its bag and unfold it by pulling two corners in opposite directions to 'open' the chair out.
 - The back rest may not be in place at this point. If this is the case simply take the back rest ensuring the mesh panel is not twisted and place it in place on the upright bars at the back of the chair.
 - You will find a shaped connector at the end of each side of the back rest. These will slide into position at the top of each of the upright poles of the chair's back. As the connectors are shaped you will find you have to angle the back rest at approximately 90 degrees before it will drop into position. Once it has dropped into position it will swivel to the upright position and lock into place.
 - The chair is now ready to use.
- The swivel back chair allows the owner to sit back in their chair and the back rest swivels automatically to the amount of pressure put onto it. This helps the seat position itself automatically to give the best level of comfort when using the chair. There is no adjustment on the backrest, once the back rest is put into place the chair is ready to use.

Folding the chair

- Folding the chair is opposite to the unfolding instructions above. We recommend taking the swivel back rest off when folding the chair as it makes a smaller pack size.
 - Swivel the back rest to approximately 90 degrees and remove each side of the back rest from the upright poles.
 - Place the back rest onto the seat and then fold the chair in by pushing two opposite corners together. Ensure there is nothing obstructing the frame before folding.
 - The chair should fold into a small upright package without any undue force required.
 - The chair should now fit into its bag correctly.
 - We recommend putting the legs in first as this makes it easier and safer when sliding into the bag.

F2072 : Lakeland Grassmere swivel back full instructions

Storage

To help keep your product looking newer for longer and prolong the life and use of the product, we recommend that the product is covered when not in use.

If the product is not going to be used for an extended period (such as a winter period) we recommend that it is carefully folded away and stored in a clean, dry and free from damp location.

Care and Cleaning Instructions

Never use and harsh or abrasive cleaners or brushes when cleaning this product as the frame and fabric may be damaged when doing so.

Never fold and put the product away when wet as this can trap water in the product, which can lead to mould and mildew build up.

- **Fabric** : We recommend using a dedicated fabric cleaner for the fabric, if one is not available simply warm soapy water. After it has been cleaned, rinse with clean water to make sure there's no soap or cleaner left inside the fabric. Once rinsed allow the product to dry naturally before folding away and storing.
- **Frame** : First allow any dirt to dry and brush with a soft brush to remove loose dirt. Once this is done wipe the frame down with warm soapy water and a soft cloth. Once cleaned allow to dry naturally before storing away.

F2072 : Lakeland Grassmere swivel back full instructions

Warranty : 12 Months (1 Year) warranty.

Warranty Claim

- In the unlikely event of a warranty claim, you must contact your retailer.
- If you have not registered your product, first fill out the registration form overleaf and take this with you when you go to your retailer.
- Take the product to your retailer that you purchased it from along with your proof of purchase and explain the issue with the retailer.
- The retailer will then check the product and get in touch with the wholesaler or manufacturer.
- The retailer will keep you informed of the progress of the claim.
- The wholesaler or manufacturer will not (unless under special circumstances) get in touch with you as all information will be passed back directly to the retailer.

Warranty Information

- This product comes with a full 12 month manufacturers defect warranty and covers any manufacturers defects for one (1) year from the date of the original purchase. It does not cover any damage occurred though:
 - The product falling, being dropped, scratched or damaged in any way.
 - The product has been technically changed by the owner or another third party
 - Improper use of the product.
 - Normal wear and tear - which includes (but is not limited to): colour fading, wearing, stretching.
 - Weather damage - which includes (but is not limited to) U.V. degradation and colour changing.
- The affected part will be replaced or repaired (manufacturers option) if they are found to be defective within the one (1) year time frame.
- The warranty will be void if the product has been subject to neglect, misuse, improper installation, misapplication, alteration or accident including, but not limited to, improper installation, maintenance or use of unauthorised parts or attachments.
- Damage caused by not following the instruction manual in full will invalidate the warranty, if this results in consequential damages, Quest will not be liable for these damages or any costs incurred due to these damages.
- Quest will not be liable for material damage or personal injury caused by improper use or if the safety instructions are not properly executed in full.
- All claims must be made through the retailer you purchased the product from and not direct with the wholesaler or manufacturer.
- Warranty claims cannot be honoured without an original dated receipt and or proof of purchase.
- By executing repairs the original warranty period of one (1) year will not be extended, nor the right to a complied new warranty. This warranty is only legal on European soil.
- This warranty does not overrule the European directive 2011/83/EU.
- This product may not be amended or changed.

F2072 : Lakeland Grassmere swivel back full instructions

*This product is part of the **Quest Lakeland** range of products. These ranges includes the following items that are matched with your product.*

Removable
**foot
rest**

Patented
**Frame
system**



Q-Tex Weave
Strong, durable and fully stitched...



Cat No F2071

Ambleside relaxer

- Powder coated steel frame • Q-tex weave deluxe fabric • Soft feel fabric for extra comfort
- Detachable footrest • Size (without rest): 85 x 54 x 90 cm. • Seat height: 40 cm.
- Size (with rest): 85 x 115 x 90 cm. • Seat width: 56 cm.
- Folded: 22 x 16 x 95cm. • Weight: 4.5kg • Max load: 120kg.

F2072 : Lakeland Grassmere swivel back full instructions

*This product is part of the **Quest Lakeland** range of products. These ranges includes the following items that are matched with your product.*

Unique
Swivel
back rest

Patented
Frame
system



Q-Tex Weave
Strong, durable and fully stitched...

Cat No F2072

Grassmere swivel back chair

- Powder coated steel frame • Q-tex weave deluxe fabric • Soft feel fabric for extra comfort • Carry bag
- Size: 85 x 49 x 86 cm. • Folded: 20 x 20 x 90 cm. • Seat height: 40 cm. • Seat width: 54 cm.
- Weight: 3.68 kg • Max load: 120 kg.

F2072 : Lakeland Grassmere swivel back full instructions

*This product is part of the **Quest Lakeland** range of products. These ranges includes the following items that are matched with your product.*



Cat No F2050

Concert pack away chaur

- Powder coated steel frame • 600D fabric • Durable and hard wearing • Integrated cup holder
- Lightweight • Carry bag • Adjustable arms • Small pack size
- Size: 87 x 55 x 105 cm. • Seat height: 40 cm. • Seat width: 56 cm.
- Folded: 30 x 30 x 105 cm. • Weight: 3.1 kg • Max load: 120 kg.

F2072 : Lakeland Grassmere swivel back full instructions

*This product is part of the **Quest Lakeland** range of products. These ranges includes the following items that are matched with your product.*



Cat No F2051

Festival pack away chair

- Powder coated steel frame • 600D fabric • Durable and hard wearing • Integrated cup holder
- Lightweight • Carry bag • Adjustable arms • Small pack size
- Size: 82 x 45 x 90 cm. • Seat height: 39 cm. • Seat width: 49 cm.
- Folded: 18 x 11 x 90 cm. • Weight: 1.77 kg • Max load: 100 kg.

F2072 : Lakeland Grassmere swivel back full instructions


*This product is part of the **Quest Lakeland** range of products. These ranges includes the following items that are matched with your product.*



Cat No K0400

Coniston ice bag

- Handle straps • Netted side & Zipped front pocket • Wipe clean • Dual zips
- Thick waterproof thermal insulation
- Weight: 0.87 kg.
- Size: 44 x 32 x 34 cm. • Folded: 44 x 7 x 37 cm.

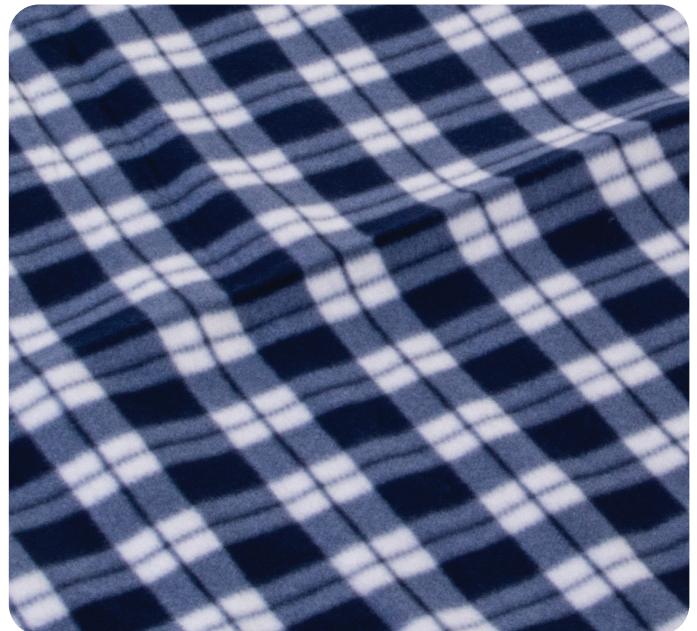

Cat No K0404

Eskdale picnic rug

- Comfortable roll away picnic mat
- 3 Layer performance • Durable EPE base
- Soft foam middle layer
- Comfortable flannelet top layer
- Weight: 0.57 kg.
- Size: 150 x 135 cm.
- Folded: 19 x 45 x 13 cm.



Cat No K0403

Gosforth 4 Person picnic set

- Backpack • Cutlery set • Picnic rug
- Shoulder straps • Insulated bottle holder
- Insulated storage section
- Waterproof bottom panel
- Cutlery set consist of: 4 x plates, knives, forks, spoons, mugs and napkins plus a bottle opener
- Size: 40 x 32 x 20 cm.
- Weight: 2.6 kg.

F2072 : Lakeland Grassmere swivel back full instructions

This product is part of the **Quest Lakeland** range of products. These ranges includes the following items that are matched with your product.



Cat No 124900

Quest Elite® furniture bag

- New improved colour and more durable material
- Premium quality
- Complete with its own carry bag
- Can fit multiple chairs in one bag • Universal use
- Fabric: 600D Fabric • Size: 67 x 18 x 113 cm
- Weight: 1.1 kg



Cat No 118914DP

Clamp on sun shade

- Adjustable position • U.V. protection
- Universal use • Anti glare • Can be used on chairs, tables, prams, push chairs and more
- Canopy radius: 68.5 cm • Height: 105 cm
- Folded size: 7 x 7 x 94 cm
- Weight: 0.3 kg.



Cat No 124901

Quest Elite spare elastics

- Elasticated cord • Metal end caps
- Fits all relax and comfort chairs
- QTY: 4 cords (2 different lengths)
- Length: 36 inches and 72 inches

F2072 : Lakeland Grassmeree swivel back full instructions

*This product is part of the **Quest Lakeland** range of products. These ranges includes the following items that are matched with your product.*



Cat No A1037

Falcon 500 Windbreak

- Strong steel frame • Quest Tec75 lightweight awning fabric • Very lightweight • Deluxe carry bag
- Size: 500 x 140 cm • Packed size: 57 x 14 x 11 cm • Weight: 1.94 kg.



...outdoor leisure, home & garden



www.twitter.com/questleisure



www.facebook.com/questleisure



www.youtube.com/questleisure

Email: info@questleisure.com • **Web:** www.questleisure.com