



Welcome
to your instructions

K0051 : Deluxe maxi frypan

K0051 : Deluxe maxi frypan full instructions

Thank you for purchasing this product. At Quest we take every care to ensure that the product fulfils your expectations. We hope you enjoy using this product.

General Use



This product is not a toy and should never be used by children. Please ensure children are supervised at all times. NEVER leave the frypan unattended when in use. NEVER cover the frypan with anything when in use.

- Please keep these instructions, the sales receipt and, if possible, the carton along with all the inner packaging in case it is needed in the future.
- Please read the instruction manual carefully before using the product.
- Take the product out the box. Remove the stickers, protective foil or plastic from the product.
- This product is not intended to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the product by a person that is responsible for their safety.
- By ignoring the safety instructions the manufacturer can not be hold responsible for any damage or injury caused by the product.

Quest manual download site

The quest manual download site can be found at the url or the QR code below



<http://www.questleisure.com/manuals>.

K0051 : Deluxe maxi frypan full instructions

General Use..... continued

- To protect children against the dangers of electrical appliances, please make sure that you never leave the product unattended. Therefore you have to select a storage place for the product where children are not able to grab it and ensure the cable is not hanging in a downward position.
- The product must be placed on a stable, level surface.
- The user must not leave the product unattended while it is connected to the power supply.
- Keeping this product clean will increase its life span and avoid unnecessary wear.
- Make sure that the product is stored in a dry environment.
- Check if the voltage of the product corresponds to the main voltage of your supply.
- This product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the product is safe to use based on scientific evidence available today.
- For additional protection, we recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliance. The installation should be done by a qualified electrician.
- Never move the product by pulling the cord and make sure the cord can not become entangled and do not wind it around the product.
- To protect yourself against an electric shock, do not immerse the cord plug or product in the water or any other liquid.
- Do not use this product with a damaged cord or plug or when the product has malfunctions, or has been damaged in any manner.
- All repairs including to the plug or cord should be made by a competent qualified repair service. Do not repair this product yourself.
- Note: To avoid danger by accidental resetting the thermal protection, this product may not be powered through an external switching device, such as a timer, or connected to a circuit that regularly will be switched on or off.
- Do not use this product in the bathroom or near a sink filled with water. If this product has fallen into the water do not under no circumstances directly grab this product, but first pull the plug from the socket.
- Make sure that the cord is not hanging over the edge of a table or counter, does not touch any hot surfaces or comes directly into contact with the hot parts of the product. Do not place the product underneath or close to curtains, window coverings etc.
- Children shall not play with the product.
- Keep the product and its cord out of reach of children.
- Do not use outdoors or any purpose other than its intended use.
- IMPORTANT: This is a gas / steam escape on the glass lid and this is designed to allow hot gases or steam to escape during cooking. This gas or steam is extremely hot and can burn easily, NEVER place anything over the top when in use and never put any part of your body over the frypan when in use.
- Always use kitchen mittens, gloves or similar equipment when using the frypan.
- To product gets hot during use, so allow the product to cool down before you clean or store it.
- We recommend using a high quality oil when cooking as this can help the non-stick coating and help ensure cooking is cleaner and easier.
- We recommend the use of non-metallic utensils when cooking in the frypan to avoid damaging the surface of the frypan.
- We recommend cleaning the frypan before each use.

K0051 : Deluxe maxi frypan full instructions

Before First Use

- Remove all the packaging carefully ensuring no damage to the product or its surfaces.
- Check for the presence of all parts and for transport damage. In the case of damages or incomplete delivery please contact the retailer you purchased it from.
- Assemble the glass lid.
- Clean the product thoroughly before the first use.

Intended use


- This appliance is intended to cook a variety of foods. Do not use it for any other purpose.
- It is intended for use in a domestic environment and should never be used for staff kitchens, work places, shops, offices for any other working environment. Neither is it intended for use as a professional establishment such as hotels, bed and breakfasts, motels or anywhere similar.

Operation

- Turn the temperature dial to 0 (off).
- Push the temperature control arm into the side of the frypan, with the temperature control dial facing upwards..
- Plug the frypan in.
- Set the temperature dial to the desired temperature (as shown in the table below).
- We recommend pre-heating the frypan for approximately 5-10 minutes or until the indicator light goes out.
- The temperature indicator light on the on the control arm when the temperature is set or when it is busy adjusting to the higher temperature.
- Once the temperature has been reached the indicator light will cycle indicating the temperature is ready and being maintained.
- When you add food for the first time the temperature will drop and the indicator light will come on indicating it is bringing the frypan back up to temperature.

Cleaning

- Pull out the mains plug and wait for the frypan to cool down.
- Remove the temperature control arm.
- Never immerse the frypan in water or any other liquid or put it in a dishwasher
- Clean the frypan with a damp cloth or sponge with a mild soap solution.
- Please be careful as once wet the device may get slippery and difficult to hold.
- Do not use a sharp object, wire brushes, abrasive scourers or abrasive substances to clean the frypan.
- Do not immerse the toaster in water.

Power level	Temperature (approx)	Intended use
0	0	Appliance off
	< 100°C	Keep warm
1 - 2	100°C	Toast, hamburgers, omelettes
3 - 4	150°C	Fried eggs, cakes, paellas, risotto
4	200°C	Sausages, smoked meats, steaks
5	240°C	Pizza

K0051 : Deluxe maxi frypan full instructions

Warranty : 12 Months (1 Year) warranty.

Warranty Claim

- In the unlikely event of a warranty claim, you must contact your retailer.
- If you have not registered your product, first fill out the registration form overleaf and take this with you when you go to your retailer.
- Take the product to your retailer that you purchased it from along with your proof of purchase and explain the issue with the retailer.
- The retailer will then check the product and get in touch with the wholesaler or manufacturer.
- The retailer will keep you informed of the progress of the claim.
- The wholesaler or manufacturer will not (unless under special circumstances) get in touch with you as all information will be passed back directly to the retailer.

Warranty Information

- This product comes with a full 12 month manufacturers defect warranty and covers any manufacturers defects for one (1) year from the date of the original purchase. It does not cover any damage occurred though:
 - The product falling, being dropped, scratched or damaged in any way.
 - The product has been technically changed by the owner or another third party
 - Improper use of the product.
 - Normal wear and tear - which includes (but is not limited to): colour fading and wearing.
- The affected part will be replaced or repaired (manufacturers option) if they are found to be defective within the one (1) year time frame.
- The warranty will be void if the product has been subject to neglect, misuse, improper installation, misapplication, alteration or accident including, but not limited to, improper installation, maintenance or use of unauthorised parts or attachments.
- Damage caused by not following the instruction manual in full will invalidate the warranty, if this results in consequential damages, Quest will not be liable for these damages or any costs incurred due to these damages.
- Quest will not be liable for material damage or personal injury caused by improper use or if the safety instructions are not properly executed in full.
- All claims must be made through the retailer you purchased the product from and not direct with the wholesaler or manufacturer.
- Warranty claims cannot be honoured without an original dated receipt and or proof of purchase.
- By executing repairs the original warranty period of one (1) year will not be extended, nor the right to a complied new warranty. This warranty is only legal on European soil.
- This warranty does not overrule the European directive 2011/83/EU.
- This product may not be amended or changed.

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*



Whistling camping style kettle

- High quality • Easy pour • Easy clean high gloss finish • Lightweight • Aluminium base • Whistle function
- Size: 16 x 16x 14 cm. • Weight: 0.21 kg. • Capacity: 1L.
- Size: 18 x 18 x 17 cm. • Weight: 0.26 kg. • Capacity: 2L.
- **Cat No K0054** : 1L
- **Cat No K0055** : 2L

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*



Cat No K0056

2L Folding handle whistling kettle

- Stainless steel construction • Easy pour spout • For use on any hob • Folding handle
- Size: 20.5 x 22 cm. • Volume: 2 L • Weight: 0.4 kg.

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Stainless
Steel
body



Cat No 1153

- Metal construction • Easy pour spout • For use on any hob
- Size: 20 x 20 x 20 cm. • Capacity: 2L • Weight: 0.38 kg.

2L whistling kettle

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*



2.2L Whistling kettle

- Whistle spout • All metal construction • Cool touch handle • For use on any hob • Lightweight
- Size: 19 x 19 x 20 cm • Weight: 0.4 kg.

• **Cat No 1143B:** Black

• **Cat No 1143C:** Cream

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Stainless
Steel



Cat No 1177

Stainless steel teapot

- High quality • More flavour • Tea bags or loose leaf tea • Removable tea filter • Lightweight • Easy to clean
- Durable • Stain resistant • Glass and stainless steel body
- Capacity: 900ml. • Size: 14 x 15 x 11 cm. • Weight: 280g.

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0025

12v Mallard Electric Kettle

- Runs direct from your 12v • Cordless • Water level indicator
- Covered heater coil • Perfect for coffee, tea, instant noodles or to heat baby food • Cord length: 140 cm
- Size: 19 x 19 x 14 cm. • Weight: 0.55 kg. • Volume: 1L.
- Voltage: 12 V • Wattage: 150 W • Hertz: 50/60 Hz

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0026

Collapsible electric kettle with folding handle

- Low wattage • Collapses when not in use • Handle folds away for even smaller pack size • Power indicator
- Size: 18.5 x 13.5 x 18 cm. • Collapsed: 18.5 x 13.5 x 18 cm.
- Capacity: 0.6 L. • Weight: 0.54 kg. • Voltage: 220 – 240v • Wattage: 750w • 50/60Hz

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0057

Glass light up kettle

- High quality • Lights up when in use • Low wattage • Power indicator • Fill gauge
- Size: 20.5 x 24 x 17.5cm. • Weight: 0.94 kg. • Volume: 1 L

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0034S

1L Rocket stainless steel cordless kettle

- Premium quality • Cordless • Over heat protection • Boil dry protection • Power light • Level indicator
- Premium high gloss finish • High quality stainless steel body • Low wattage
- Size: 21 x 13 x 21 cm. • Weight: 0.86 kg. • Volume: 1L
- Voltage: 220 - 240 V • Wattage: 1000 W • Hertz: 50/60 Hz

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0034C

1L Rocket stainless steel cordless kettle

- Premium quality • Cordless • Over heat protection • Boil dry protection • Power light • Level indicator
- Premium high gloss finish • High quality stainless steel body • Low wattage
- Size: 21 x 13 x 21 cm. • Weight: 0.86 kg. • Volume: 1L
- Voltage: 220 - 240 V • Wattage: 1000 W • Hertz: 50/60 Hz

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*



1.8L Rocket stainless steel cordless kettle

- Premium quality • Boil dry & Over heat protection • Cordless • Size: 26 x 15 x 22 cm. • Capacity: 1.8L.
- Weight: 0.98 kg. • Voltage 230V • Freq: 50/60 Hz • Wattage: 1000W

• **Cat No K0035S:** Stainless kettle

• **Cat No K0035C:** Cream kettle

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



1.7L Scotsman cordless kettle

- High quality • Water level indicator • Easy clean • Size: 25 x 12 x 24 cm. • Weight: 0.7 kg.
- Voltage 230V • Freq: 50/60 Hz • Wattage: 1000W

• **Cat No K0030:** Black

• **Cat No K0031:** White

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*



Low
Wattage

1L Low wattage Scotsman cordless kettle

- Cordless • Over heat protection • Boil dry protection • Power light • Level indicator • Lightweight
- High quality plastic body • Low wattage • Size: 10 x 18 x 21 cm. • Weight: 0.54 kg. • Volume: 1L
- Voltage: 220 - 240 V • Wattage: 1000 W • Hertz: 50/60 Hz

• **Cat No K0032:** Black

• **Cat No K0033:** White

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



2 Slice Scotsman toaster

- High quality • Low wattage • Easy clean • Crumb tray
- Size: 25 x 14 x 17 cm • Slots: 2 • Weight: 0.86 kg • Voltage 240V • Wattage: 700W • Hertz: 50/60Hz

• **Cat No K0036B:** Black

• **Cat No K0036W:** White

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0038S

2 Slice Rocket stainless steel toaster

- Browning control • Low wattage • Easy clean • Stainless steel • Crumb tray • Premium high gloss finish
- Size: 25 x 20 x 16 cm. • Slots: 2 • Weight: 1.4 kg.
- Voltage : 230V • Hertz: 50/60 Hz • Wattage: 750W

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No 2068

2 Slice Pullman stainless steel toaster

- Temperature control • Low wattage • 2 Toasting slots • Easy to clean • Removable base
- Size: 22 x 16 x 12 cm. • Slots: 2 • Weight: 0.79 kg
- Voltage: 230V • Hertz: 50/60 Hz • Wattage: 750W

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0051

Low wattage Deluxe Maxi Frypan

- Non-stick • Cast Aluminium • Temperature control • Operating light • Removable cable for easy cleaning
- Cord length: 90 cm. • Pan Size: 30.5 x 30.5 cm • Size : 31 x 42 x 14 cm. • Weight: 1.9 kg.
- Voltage: 230 V • Wattage: 1200 W • Hertz: 50/60 Hz

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0012

Large healthy griddle

- Flat cooking area • Griddle cooking area • Total size: 55 x 23.5 x 9.5 cm. • Weight: 1.7 kg.
- Cooking size: 24.5 (flat) + 12.5 (griddle) x 21 cm
- Voltage: 220 – 240v • Wattage: 1400 w • 50/60Hz

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No 7506

- Low wattage • Compact size • Versatile • Adjustable timer
- Size: 36.5 x 24 x 21.5 cm. • (Internal) 24 x 9.5 x 18.5 cm. • Weight 3 kg • Capacity: 9 L
- Wattage: 800W • Hertz: 50/60 Hz • Voltage: 220-240V.

Table top toaster oven

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No K0015

- Easy clean • Low wattage • Portable • Cord length: 100 cm.
- Hotplate size: 15.5cm. • Total Size: 43 x 23.5 x 7 cm. • Weight: 2.5 kg.
- Voltage 220 - 240V • Hertz:: 50/60 Hz • Wattage: 2 x 1000W (two hotplates)

Low wattage double hot plate

K0051 : Deluxe maxi frypan full instructions

*This product is part of the **Quest** range of kettles, tea pots, toasters and grills. This range includes the following items that are matched with your product.*

Low
Wattage



Cat No 047513

Low wattage single hot plate

- Easy clean • Low wattage • Portable • Hotplate: 15.5cm. • Size: 22 x 22 x 7.5 cm.
- Cord length: 100 cm. • Weight: 1.4kg.
- Wattage: 1000W • Hertz: 50/60 Hz • Voltage: 220 - 240V

K0051 : Deluxe maxi frypan full instructions



...outdoor leisure, home & garden



www.twitter.com/questleisure



www.facebook.com/questleisure



www.youtube.com/questleisure

Email: info@questleisure.com • **Web:** www.questleisure.com